

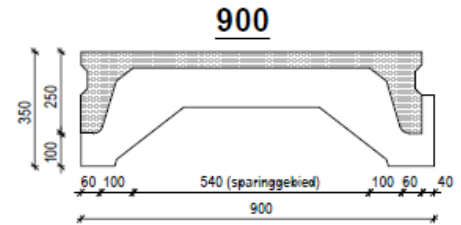
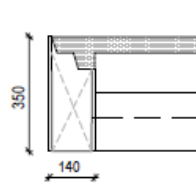



Sparingsinstructies

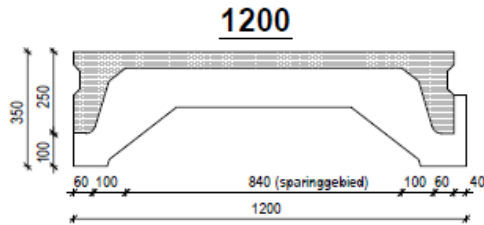


1) Kruipluiksparing

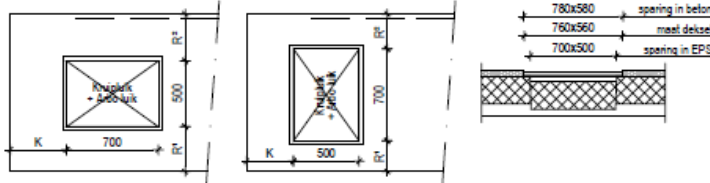


2) Veldsparing

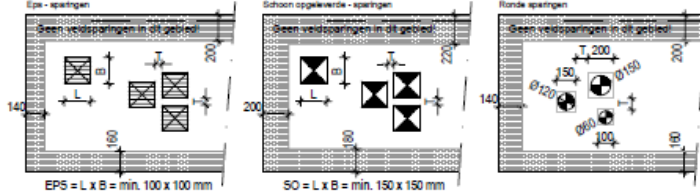


3) Kopsparing

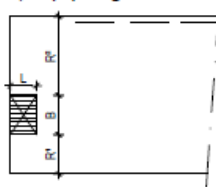


4) Hoeksparing (inverkorting)

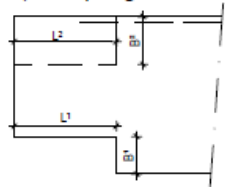



5) Meterkastsparing

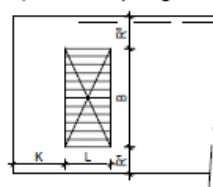

6) Meterkastblok Standaard

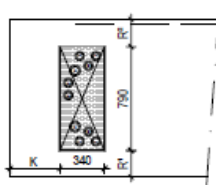

7) Meterkastblok Stadsverwarming

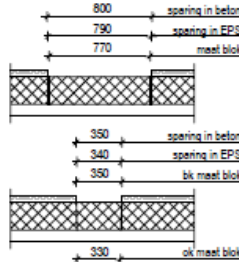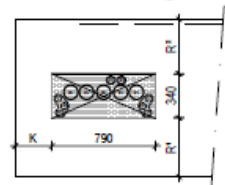

	1200mm / 900mm	
1. Kruipluiksp.	R ¹ : min. 200 / 180mm R ² : min. 240 / 220mm K : min. 250mm	
2. Veldsparing	LxB: min 100x100mm (150x150 SO) T: min. 100mm Ø: 60/120/150mm	
3. Kopsparing	L: min. 150 max. 750mm R ¹ : min. 160mm R ² : min. 200mm	
4. Hoeksparing	1200mm	900mm
100 ≤ L ≤ 300	B ¹ : 180 - 980 B ² : 220 - 980	B ¹ : 180 - 680 B ² : 220 - 720
300 ≤ L ≤ 1500	B ¹ : 220 - 980 B ² : 260 - 980	B ¹ : 220 - 680 B ² : 260 - 720
1500 ≤ L ≤ 3000	B ¹ : 220 - 850 B ² : 260 - 850	B ¹ : 220 - 550 B ² : 260 - 590
5. Meterkastsp. EPS	L: standaard 350mm B: standaard 750mm R ¹ : min. 160mm R ² : min. 200mm K : min. 140mm	
6. Meterkast blok	L: standaard 790mm B: standaard 340mm	
7. Meterkast blok stadsverw.	R ¹ : min. 180mm R ² : min. 220mm K : min. 140mm	

- Sparingmaten olopend met 50mm!